
Instruction for GT5000 VIVOPAY-V upgrade kit

1. Required tools



► Phillips screwdriver



► Auto Center Punch



► Drill & 3/16", 7/8" Drill bit


2. Parts

2-1. Required parts

	PLAT-R46Q
	CBL-R46ZR
	CBL-R46ZM
	CN-HIF3BA-20D-2.54C (Use the part if it is not present on the GT5000)
	M3 L8 SEMS 4EA



3. Preparation

3-1. Work location

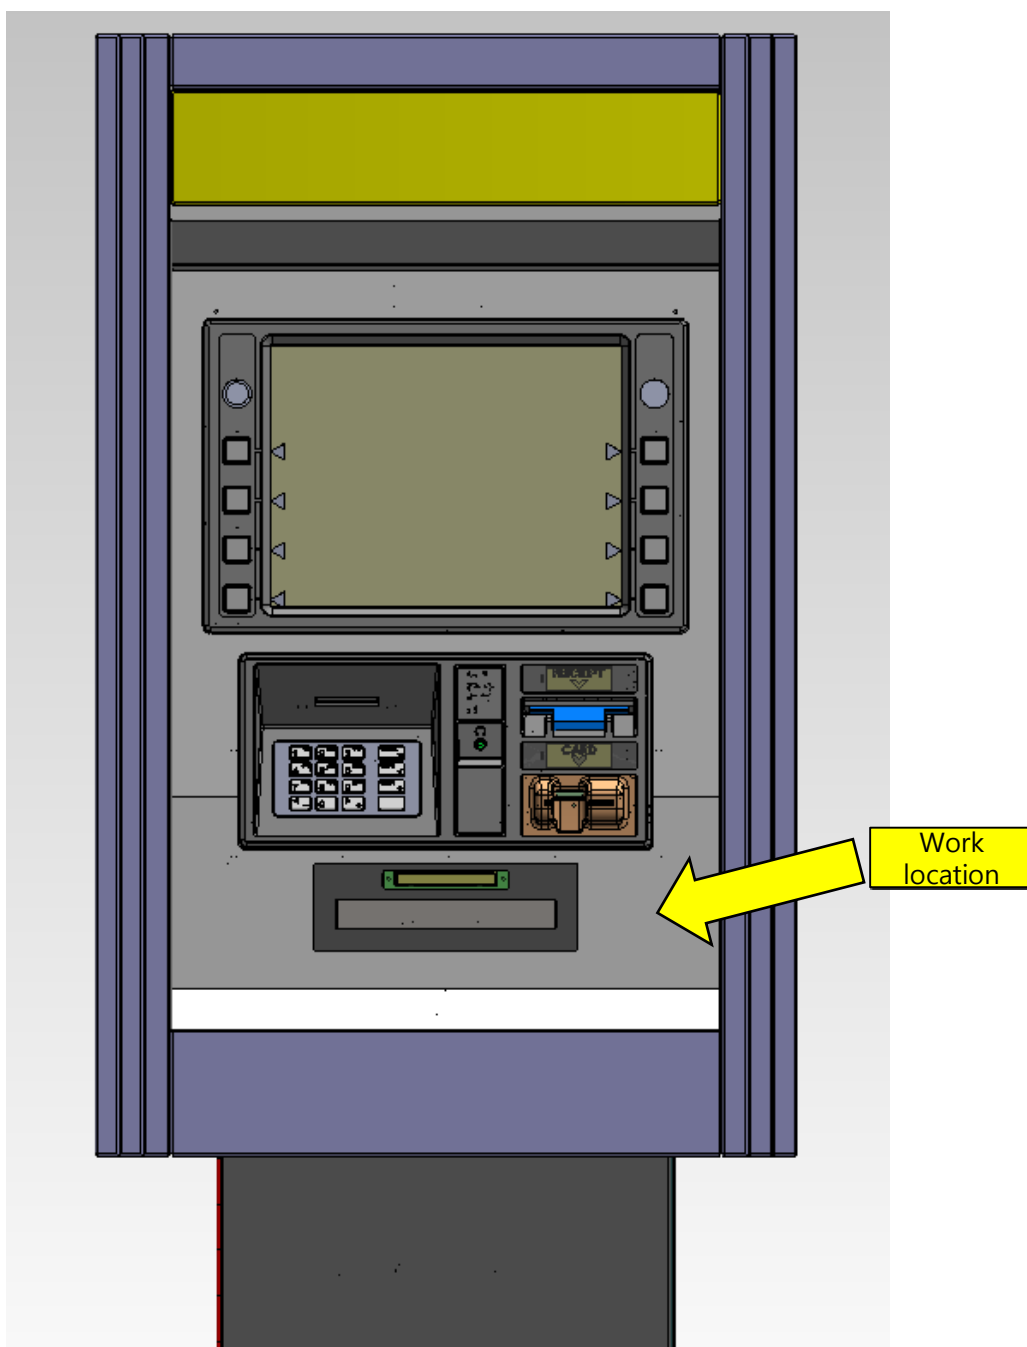

4. Work process

4-1. Attach the Jig

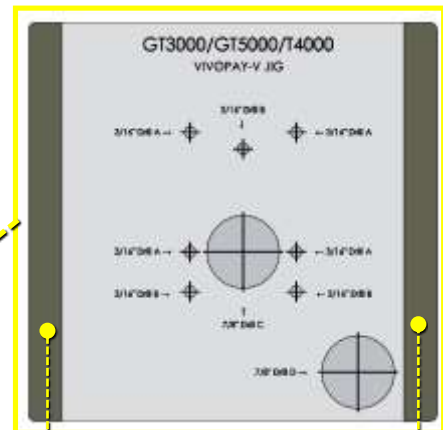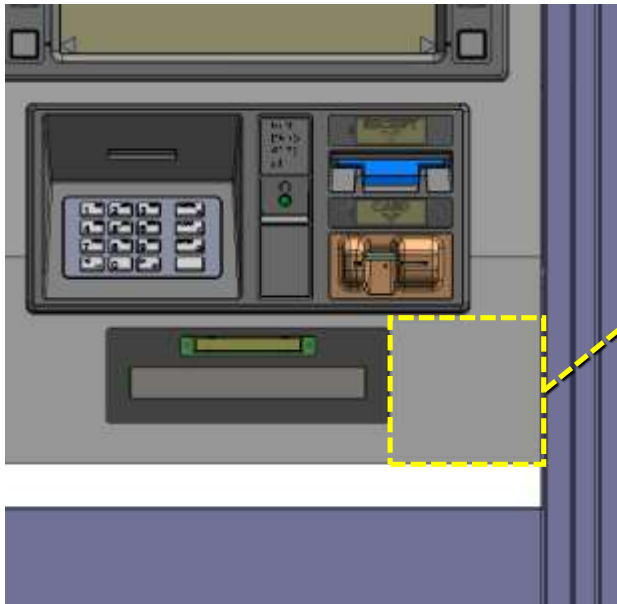

1

Remove the protective film from the double-sided tape




2

Align the outer lines of the VIVOPAY V JIG as shown in the figure and attach it


4. Work process

4-2. Drill holes in the Front bezel

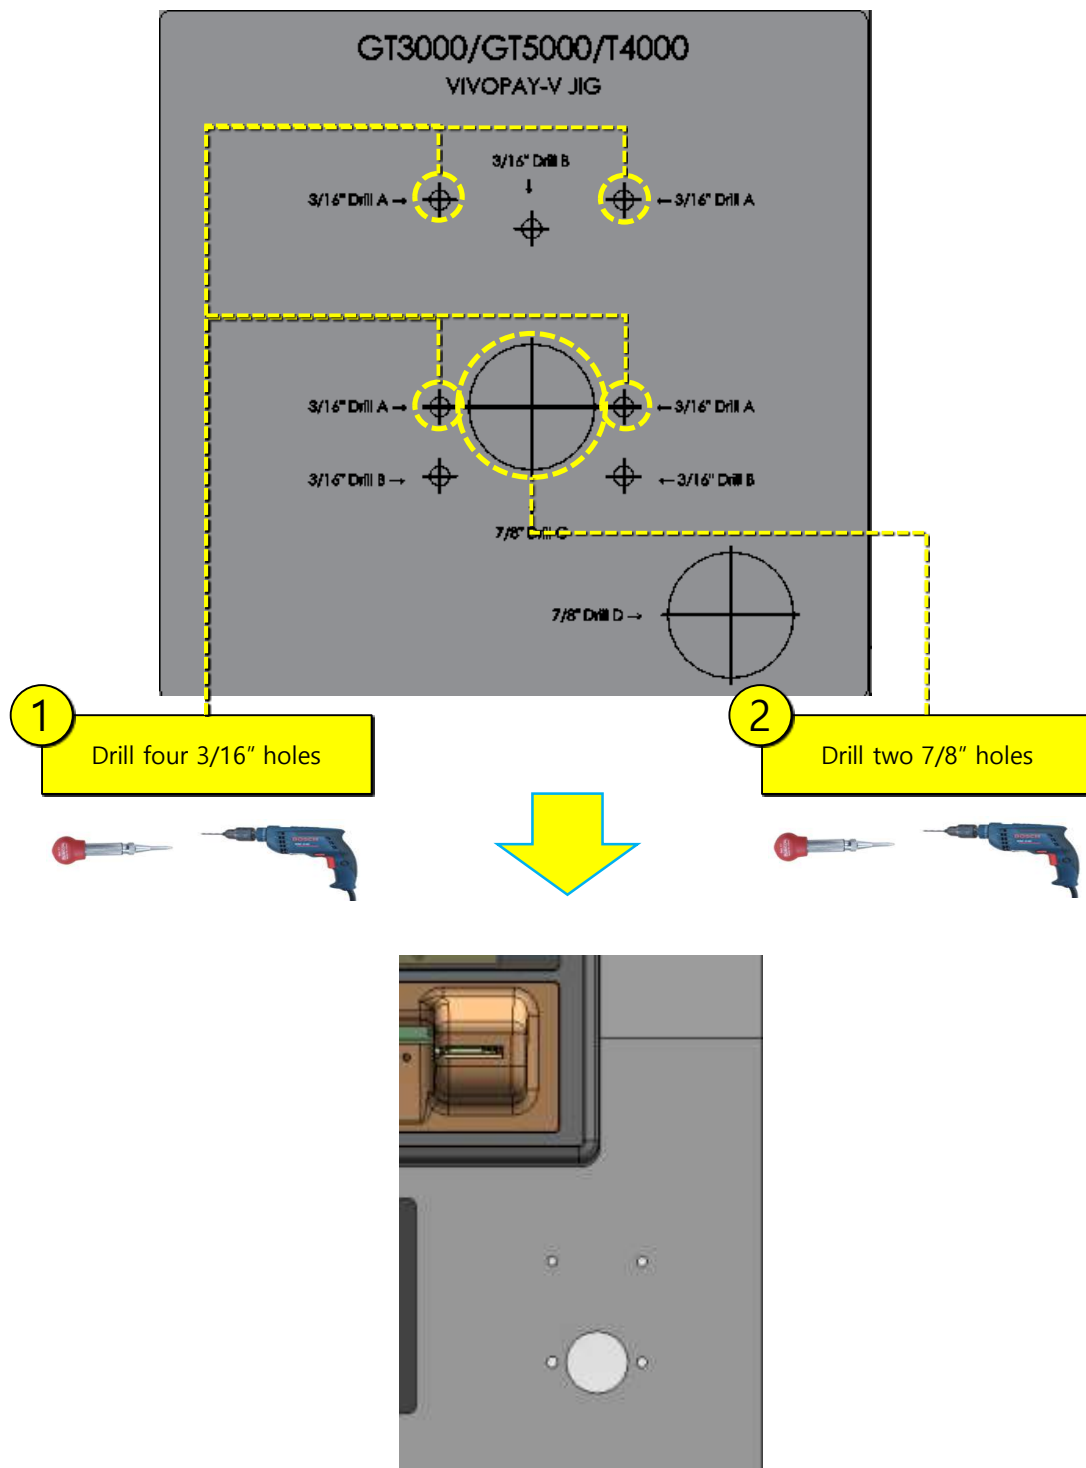


4. Work process


4-3. Install the VIVOPAY V module

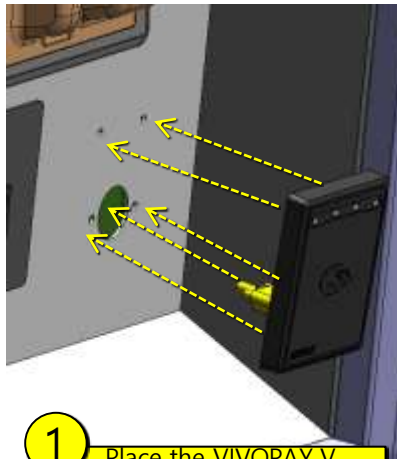



1 Place the VIVOPAY V module as shown in the figure

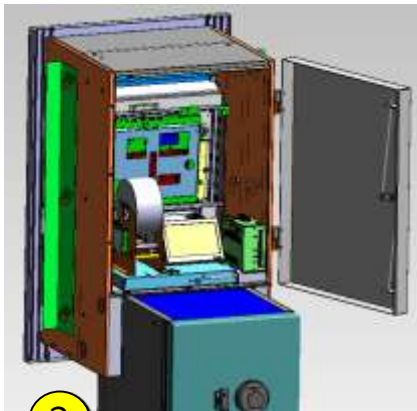

2 Open the door

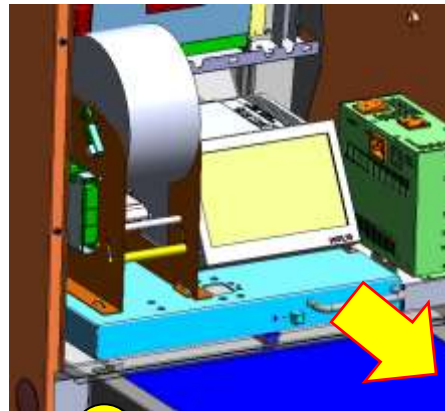


3 Slide out the shelf

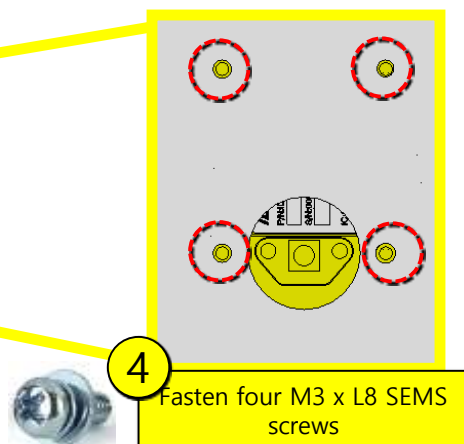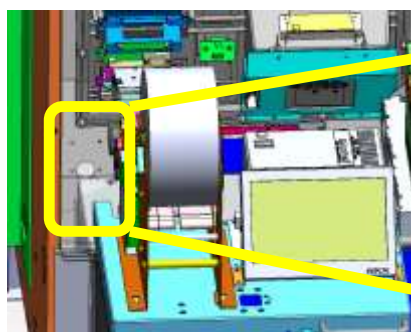

4 Fasten four M3 x L8 SEMS screws

4. Work process




4-4. Cable connection diagram

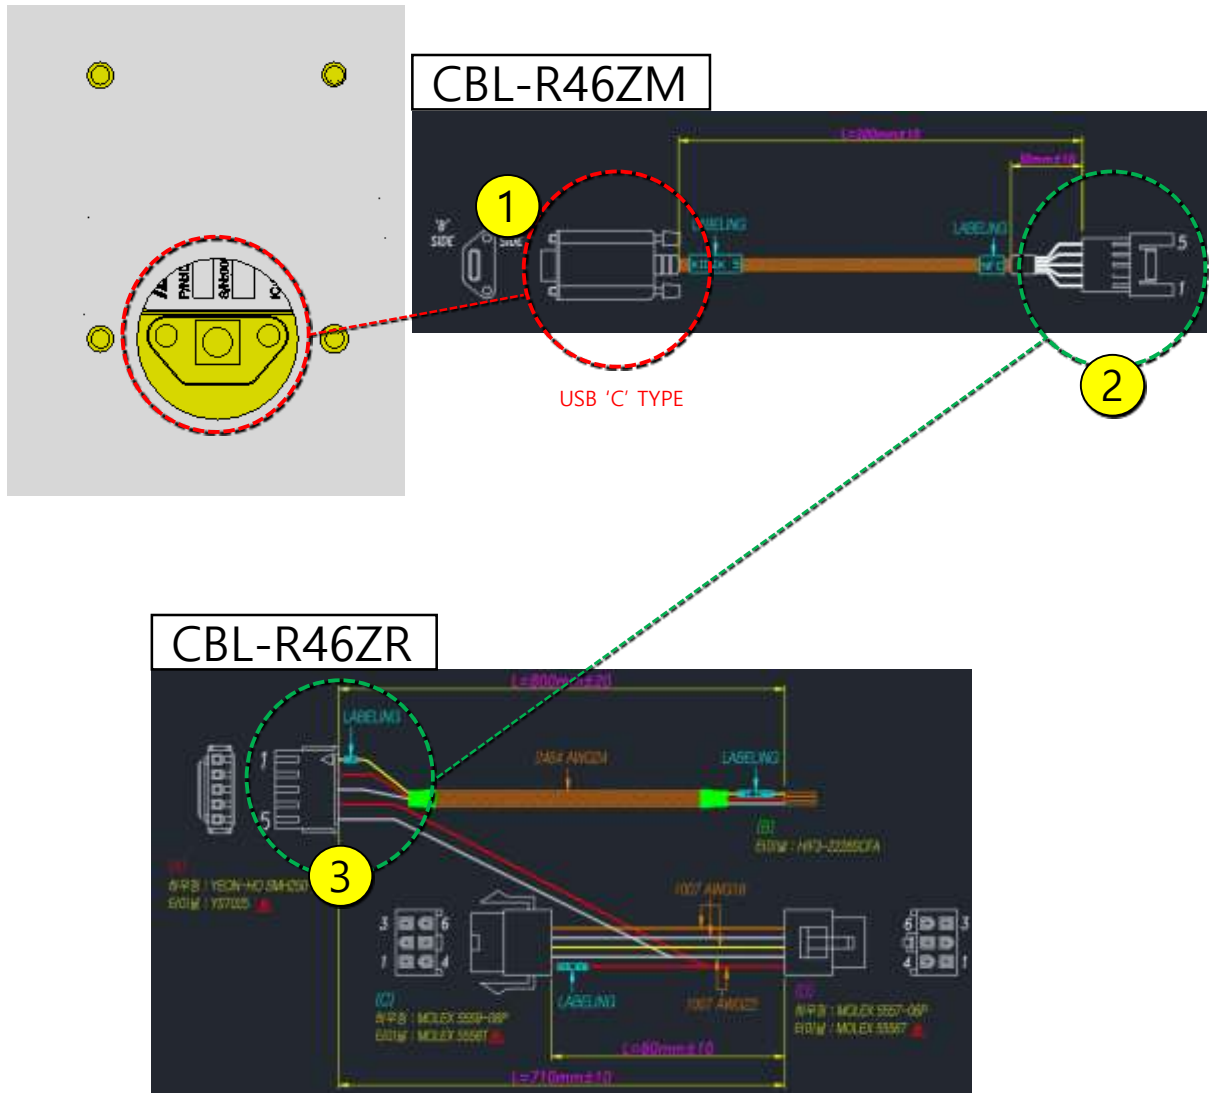

1. Connect Connector #1 (USB-C) of [CBL-R46ZM-B] to the VIVOPAY V module
2. Connect Connector #2 of [CBL-R46ZM-B] with Connector #3 of [CBL-R46ZR]

4. Work process

4-5. Cable connection diagram

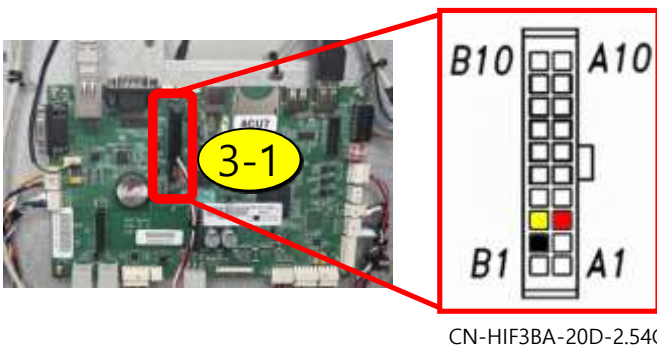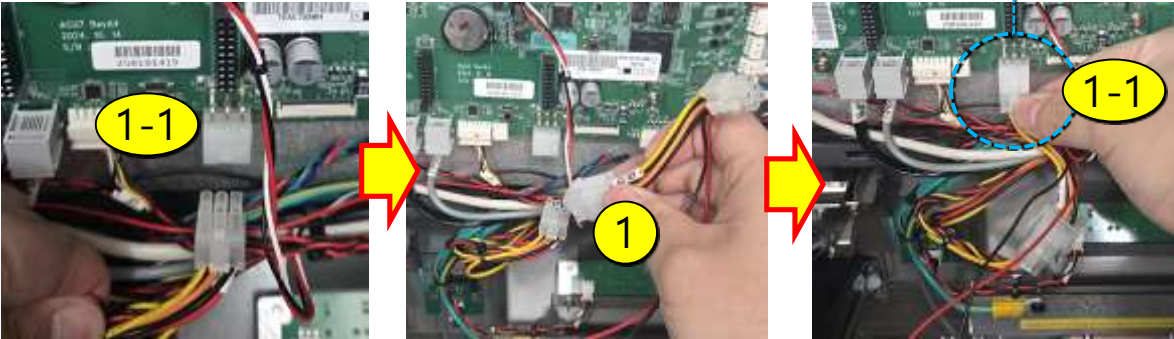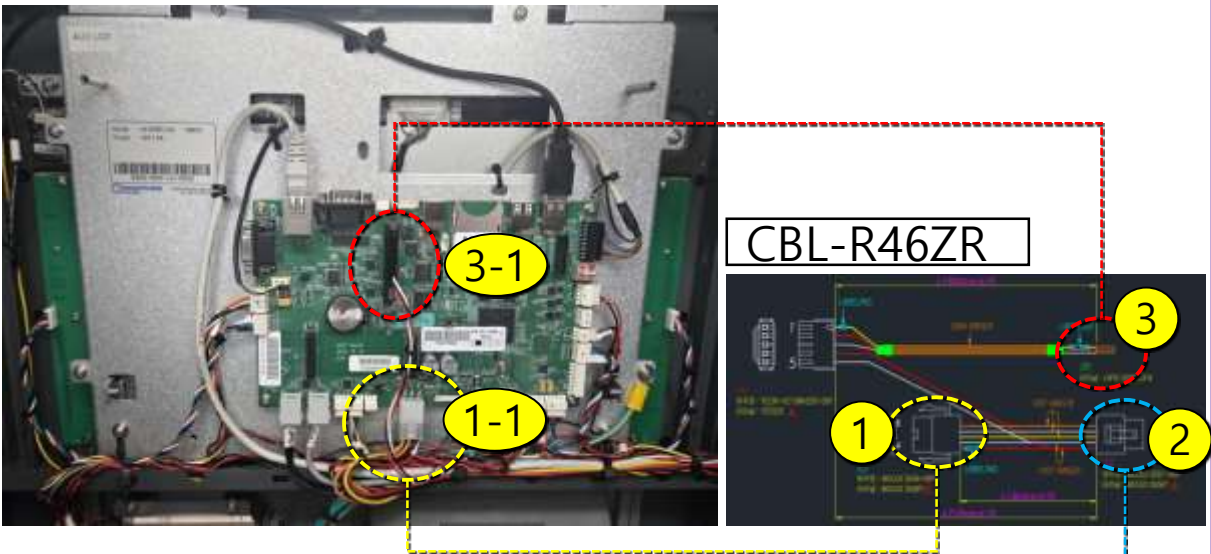

CN-HIF3BA-20D-2.54C	
A3	2.RED
B2	3.BLACK
B3	1.YELLOW

1. Disconnect the existing board power cable from position 1-1 of the machine, and connect it to Connector #1 of [CBL-R46ZR]
2. Reconnect Connector #2 of [CBL-R46ZR] to the original 1-1 position
3. Connect connector #3 of [CBL-R46ZR] to [CN-HIF3BA-20D-2.54C] at position 3-1 of the mainboard, referring to the pinout in Table 4.

5. Work completed

5-1. Work completed

