

---

# **Instruction for NOVA VIVOPAY-V upgrade kit**


# 1. Required tools



- Phillips screwdriver


# 2. Parts

## 2-1. Required parts
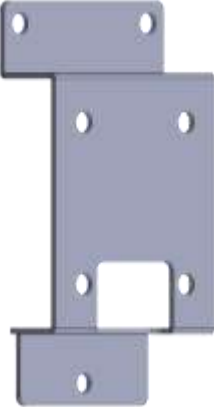
|                                                                                     |                                              |
|-------------------------------------------------------------------------------------|----------------------------------------------|
|   | [PLAT-R46F] BRACKET M-FIX VIVOPAY-V NOVA R46 |
|  | [CBL-R46ZQ] CABLE ACU TO NFC C6000 R46       |
|  | [CBL-R46ZM] CABLE GENDER VIVOPAY-V R46       |
|  | M3 SEMS L6 4EA                               |


### 3. Preparation

#### 3-1. Work location

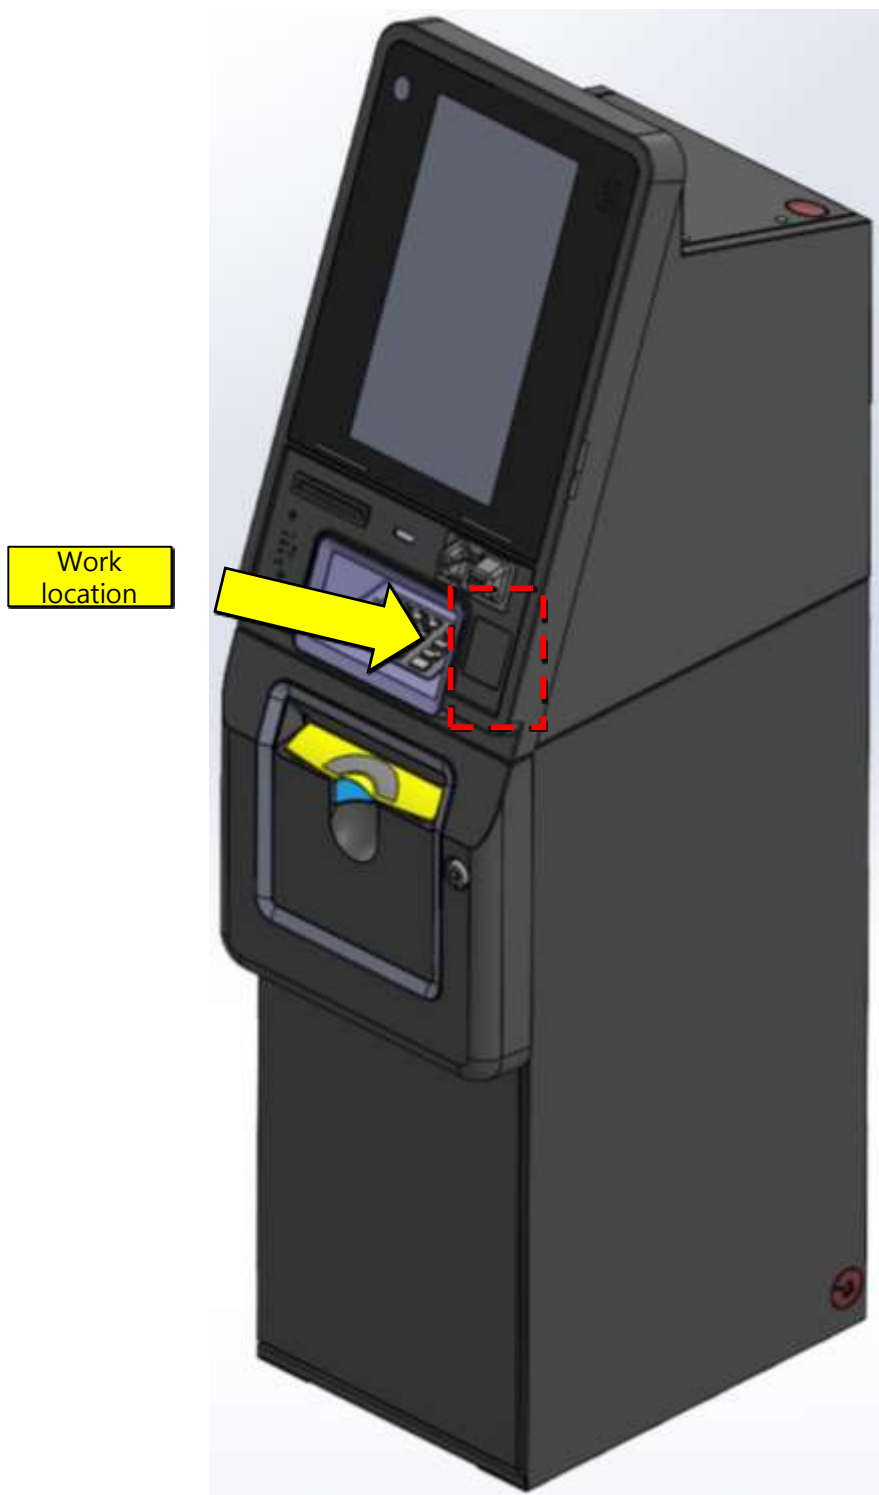


## 4. Work process


### 4-1. Open the Front bezel

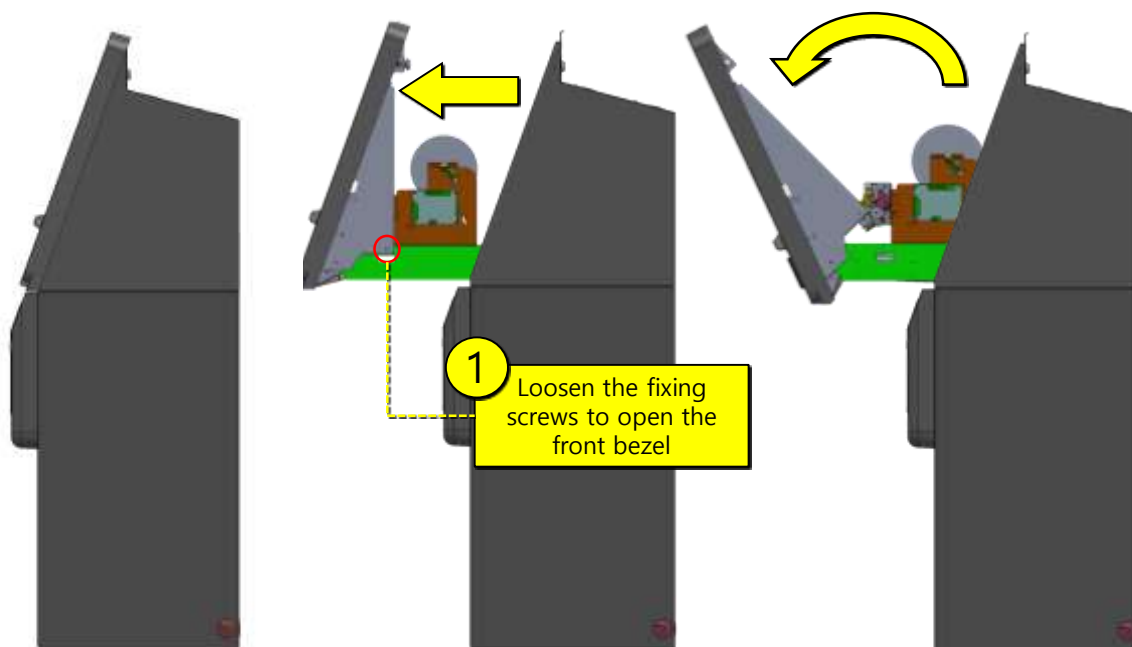

### 4-2. Remove NFC dummy cover

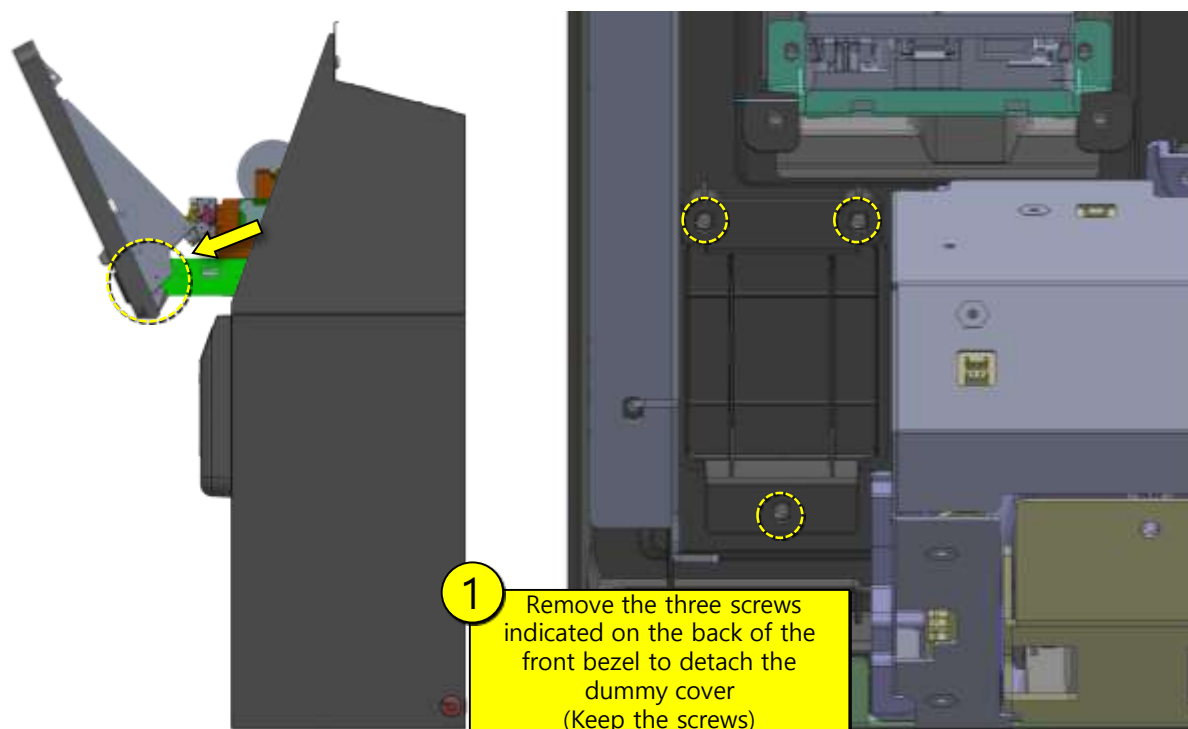


#### 4-3. Install the new parts

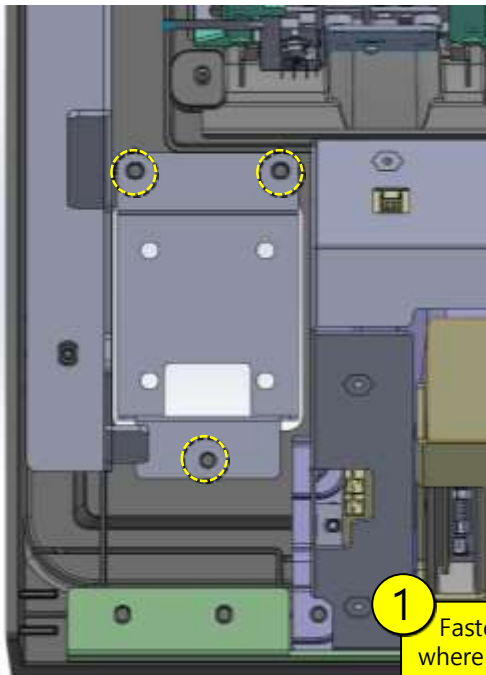






1 Fasten [PLAT-R46F] at the location where the dummy cover was removed, using the kept screws

#### 4-4. Assemble the VIVOPAY-V module with the plate

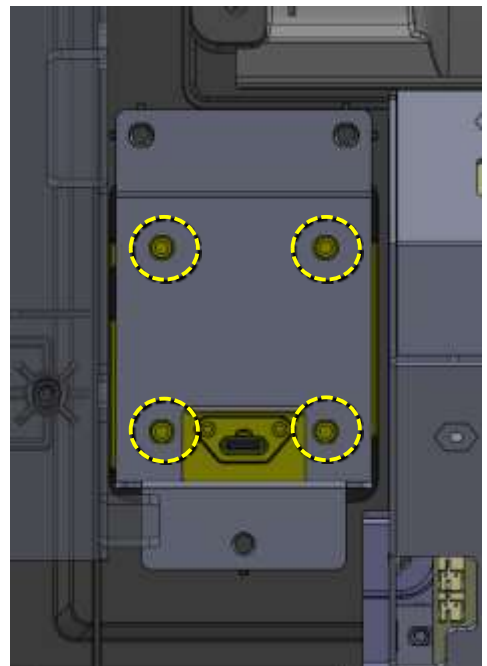


1 Fasten four M3 x L6 SEMS screws

## 4-5. Cable connection diagram

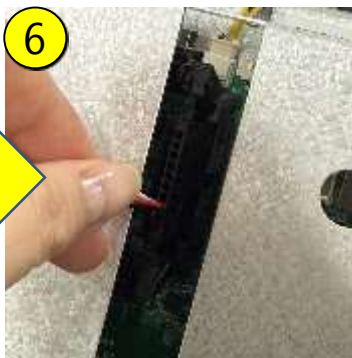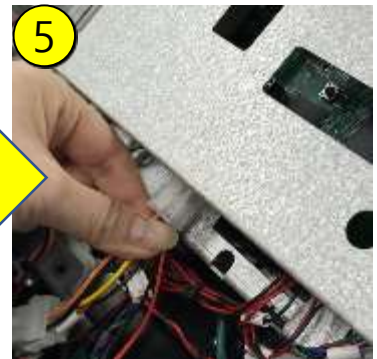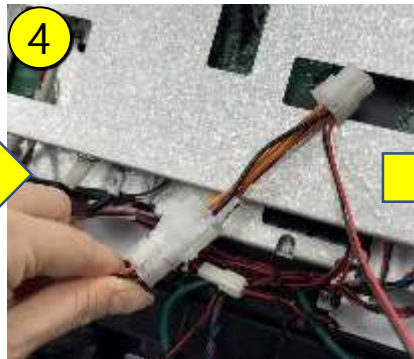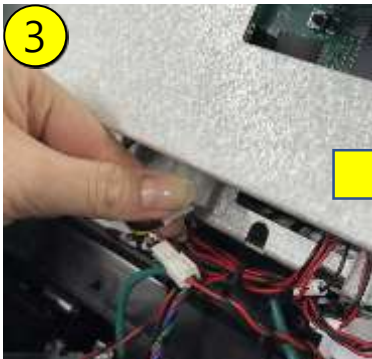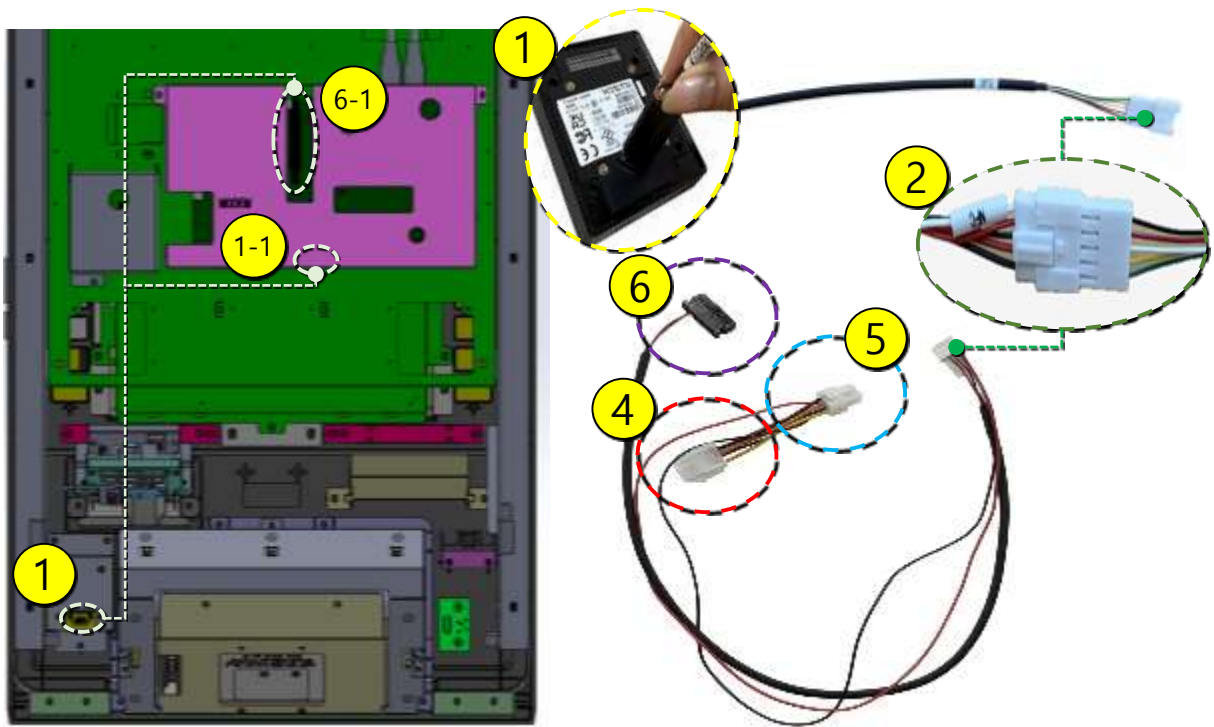

1. Connect Connector #1 (USB-C) of [CBL-R46ZM] to the VIVOPAY V module
2. Connect the [CBL-R46ZM] and [CBL-R46ZQ] connectors as shown in the figure
3. Disconnect the board power cable at position 1-1
4. Connect connector #4 of the [CBL-R46ZQ] to the original board power cable
5. Connect connector #5 of the [CBL-R46ZQ] to position 1-1
6. Connect connector #6 of the [CBL-R46ZQ] to position 6-1.

#### 4-6. Close the Front bezel

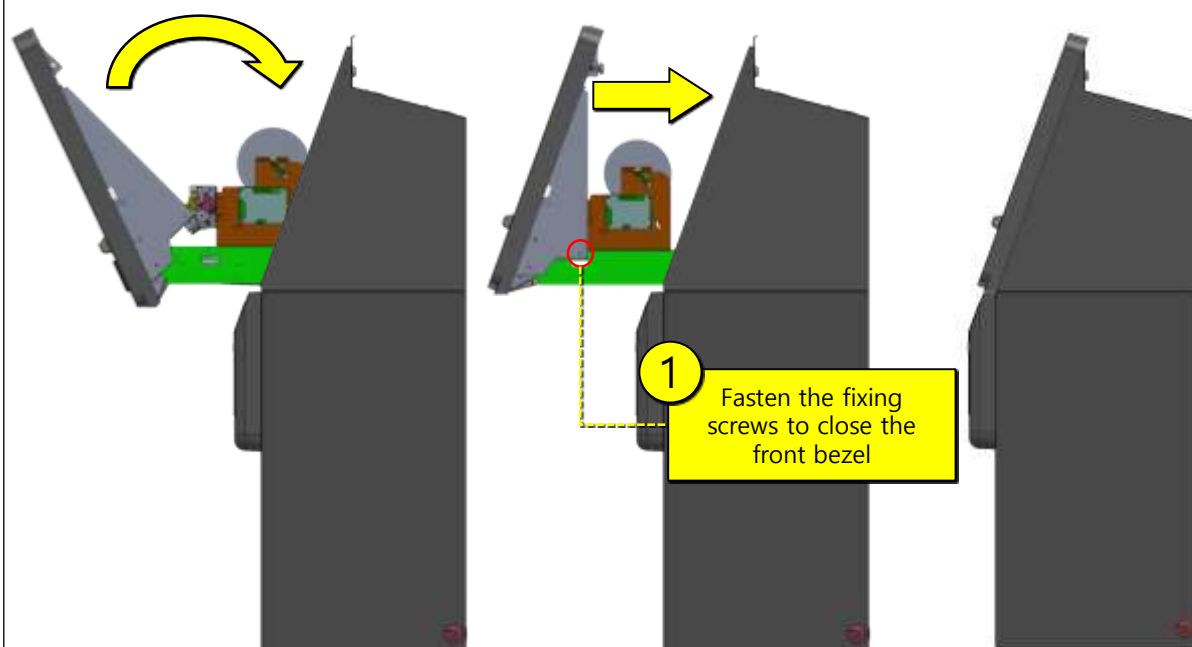

## 5. Work completed

### 5-1. Work completed

