
Instruction for Onyx-W (2K)

VIVOPAY-V upgrade kit

1. Required tools



► Phillips screwdriver ► Auto Center Punch

► NIPPER

► Drill & 3/16", 7/8" Drill bit



► Steel ruler

2. Parts

2-1. Required parts



[PLAT-R46P] PLATE JIG FIELD VIVOPAY-
V COMMON R46



[CBL-R46ZQ] CABLE ACU TO NFC
C6000 R46




[CBL-R46ZM] CABLE GENDER VIVOPAY-
V R46



M3 X L10 SEMS 4EA



3. Preparation

3-1. Work location



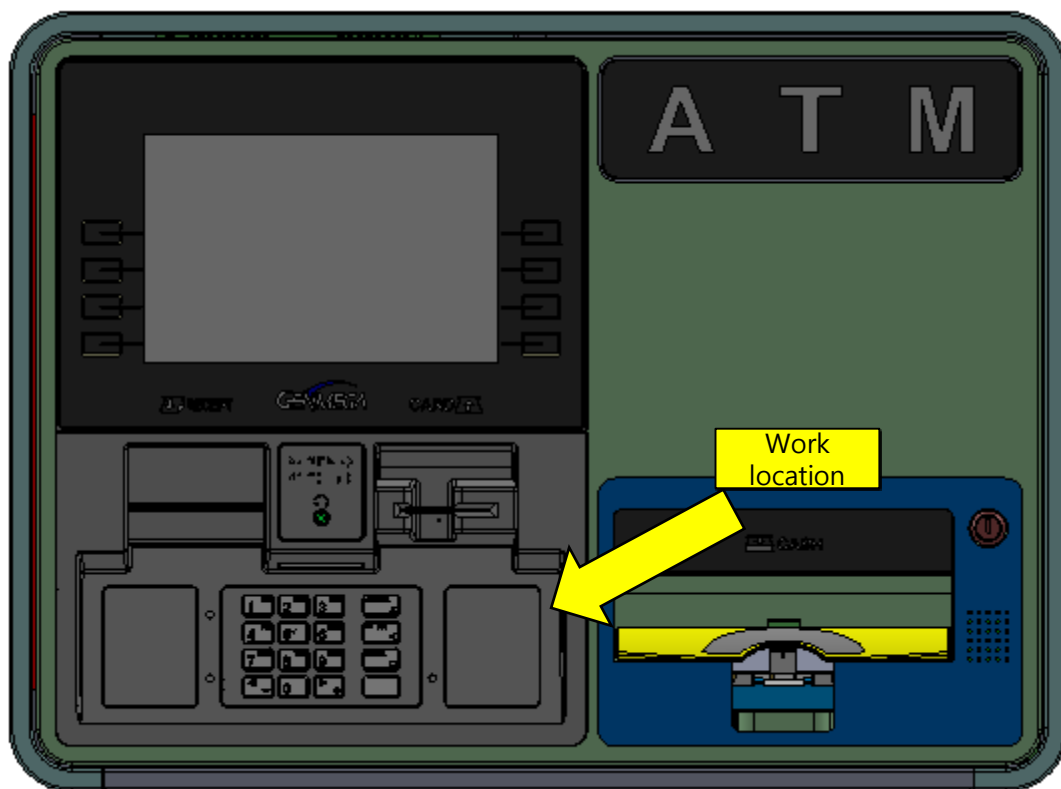


4. Work process

4-1. Open the Front door

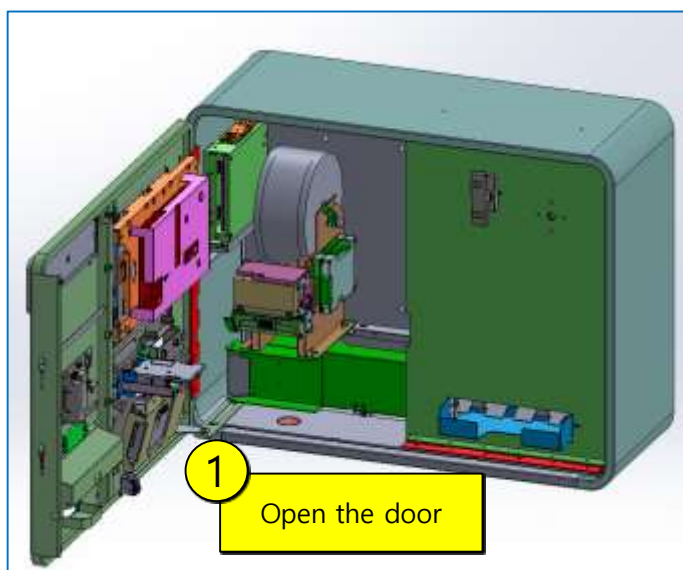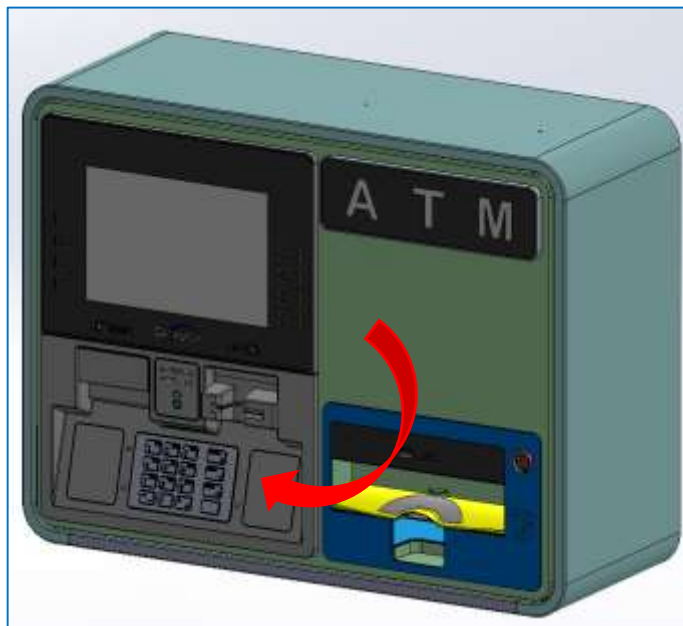


4-2. Post-processing of the Jig

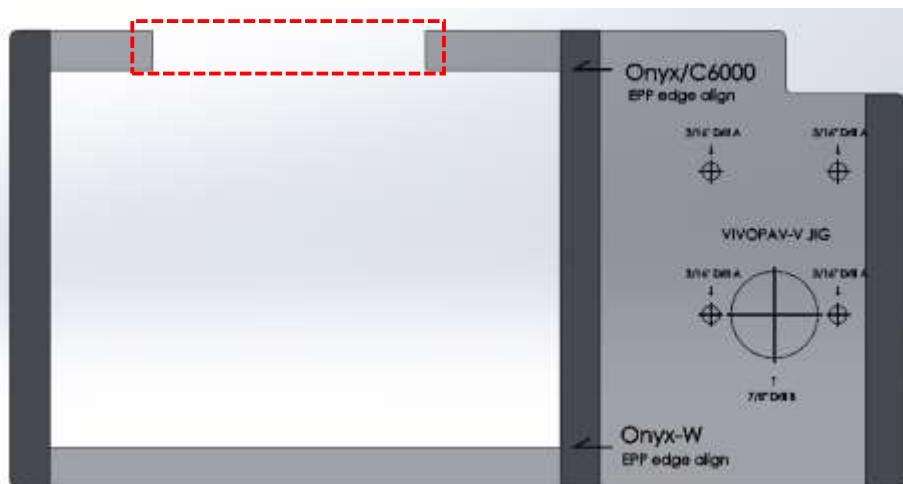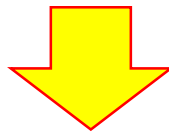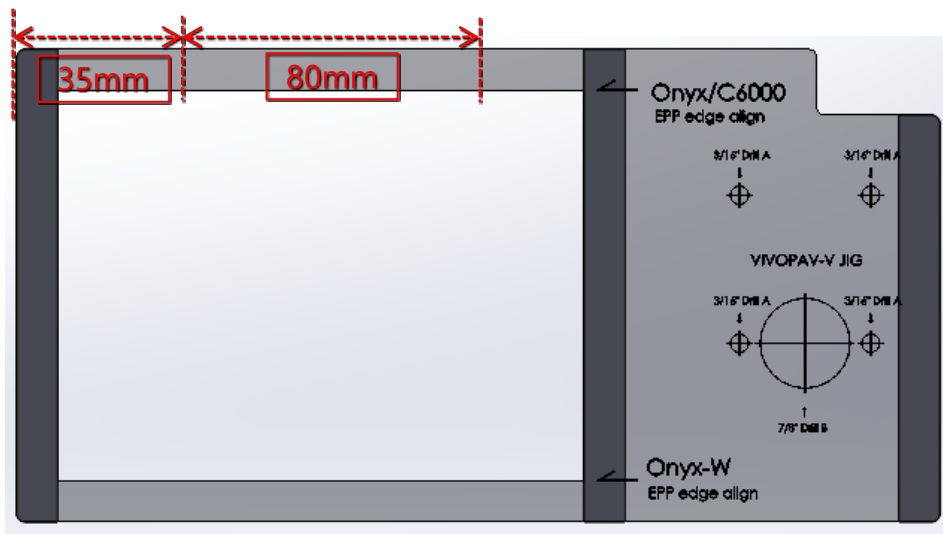


1. Cut an 80mm section starting 35mm from the left edge of the jig

4-3. Attach the Jig

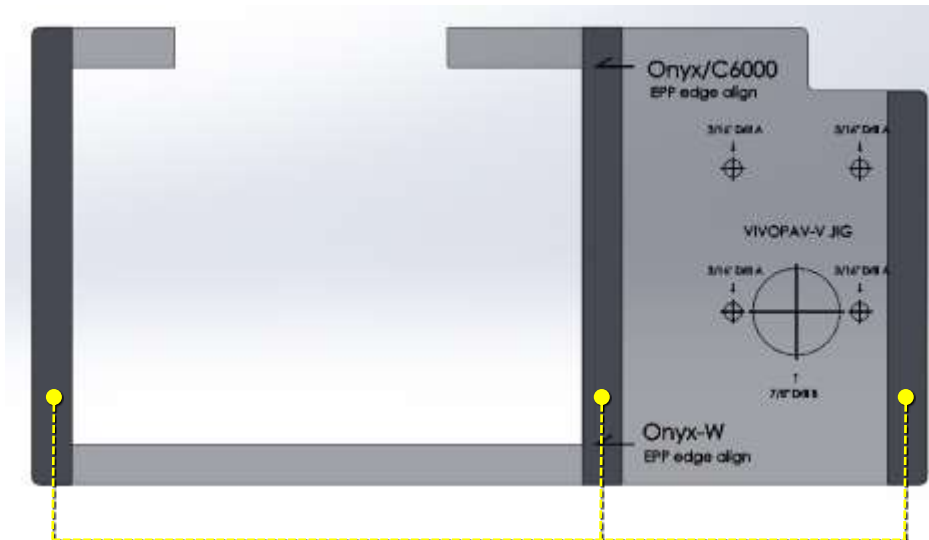

1



Remove the protective film from the double-sided tape

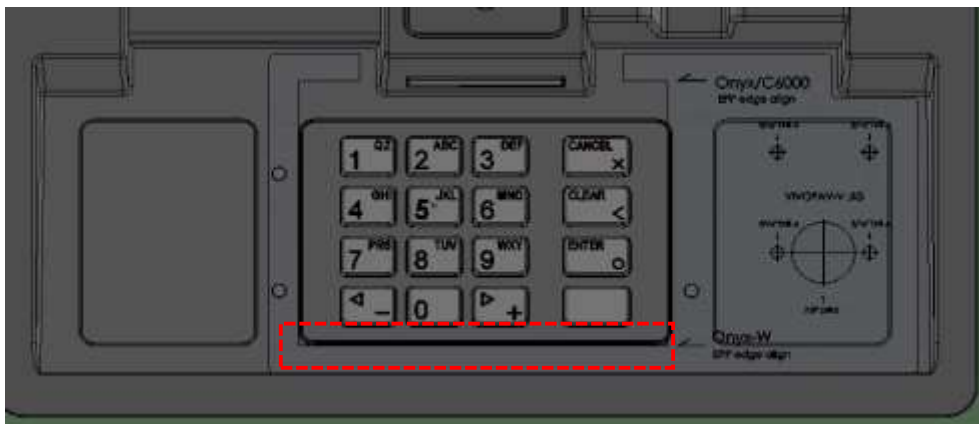

2

Align the bottom reference line of the jig with the bottom line of the bezel as shown, then attach the JIG


4-4. Drill Holes in the Front bezel

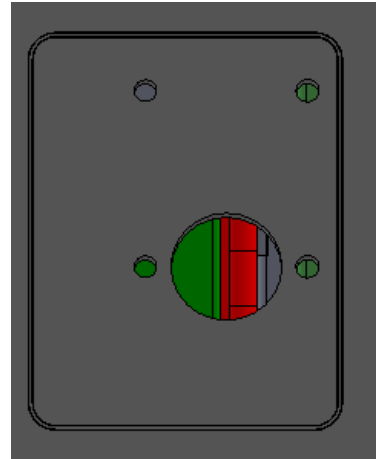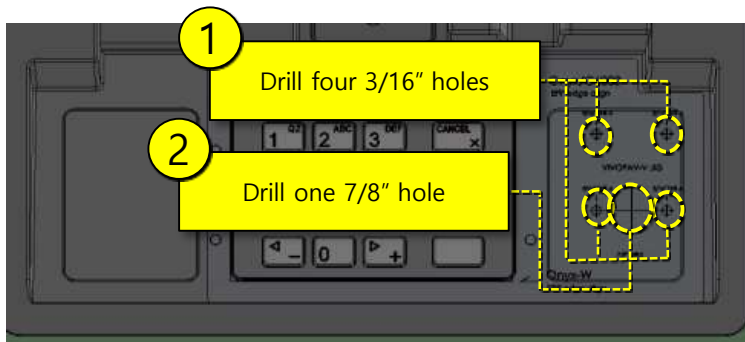

4-5. Install the VIVOPAY-V module








1 Place the VIVOPAY-V module as shown in the image above

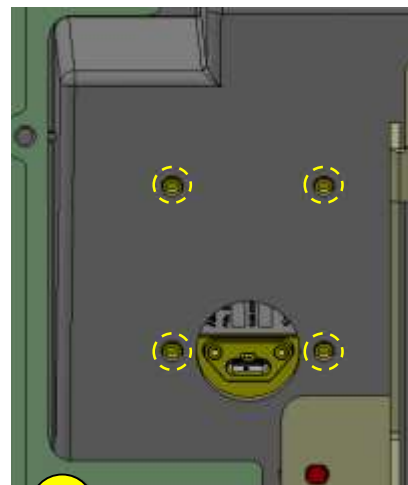

2 Fasten four M3 x L10 SEMS screws


4-6. Cable connection diagram

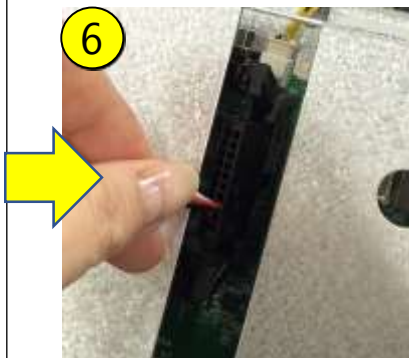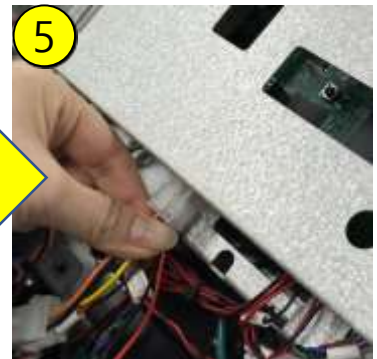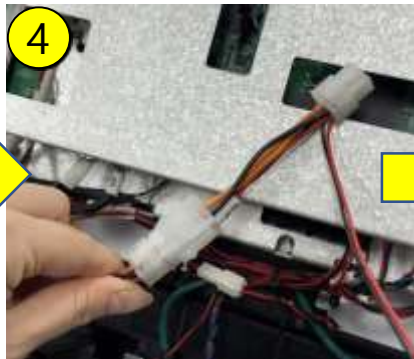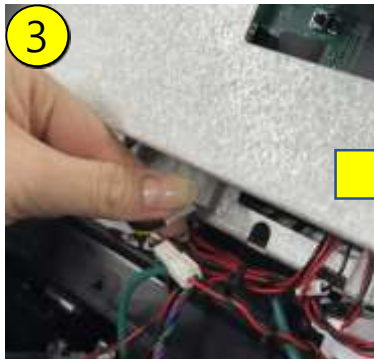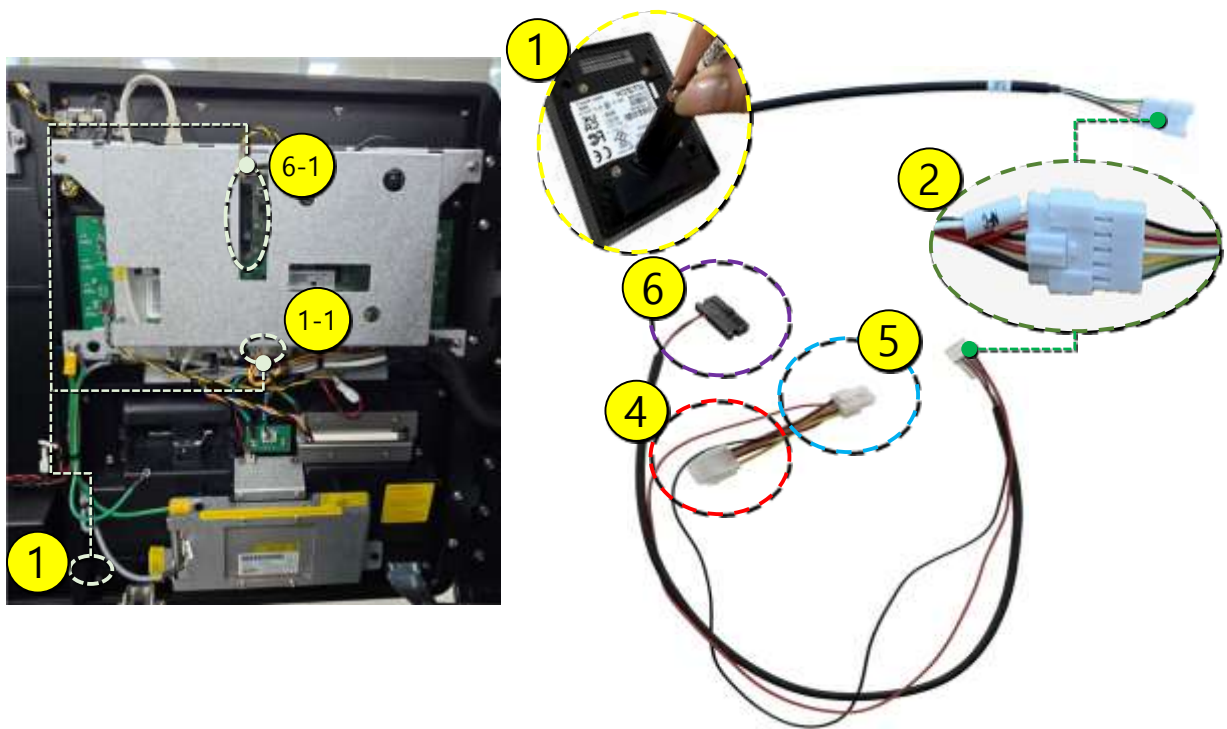

1. Connect Connector #1 (USB-C) of [CBL-R46ZM] to the VIVOPAY V module
2. Connect the [CBL-R46ZM] and [CBL-R46ZQ] connectors as shown in the figure
3. Disconnect the board power cable at position 1-1
4. Connect connector #4 of the [CBL-R46ZQ] to the original board power cable
5. Connect connector #5 of the [CBL-R46ZQ] to position 1-1
6. Connect connector #6 of the [CBL-R46ZQ] to position 6-1.

5. Work completed

5-1. Work completed

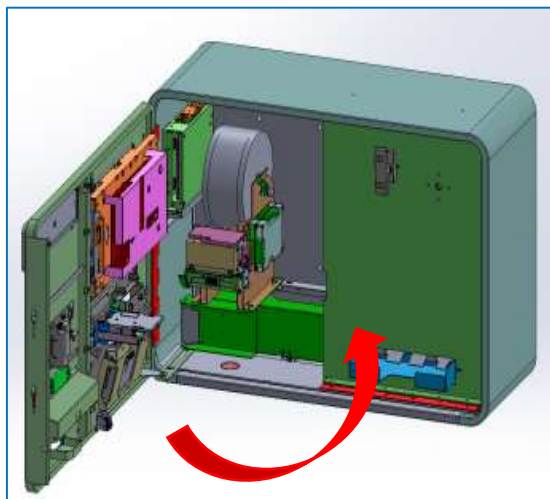

1 Close the front door

