
Instruction for t4000 VIVOPAY-Vupgrade kit

1. Required tools



► Phillips screwdriver




► Auto Center Punch



► Drill & 3/16", 7/8" Drill bit


2. Parts

2-1. Required parts

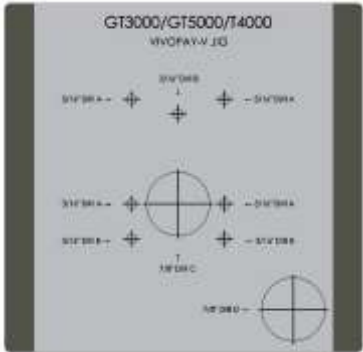	[PLAT-R46Q] PLATE JIG FIELD VIVOPAY-V GT SERIES R46
	[CBL-R46ZR] CABLE ACU TO NFC GT SERIES R46
	[CBL-R46ZM] CABLE GENDER VIVOPAY-V R46
	M3 x L8 SEMS (4EA)



3. Preparation

3-1. Work location


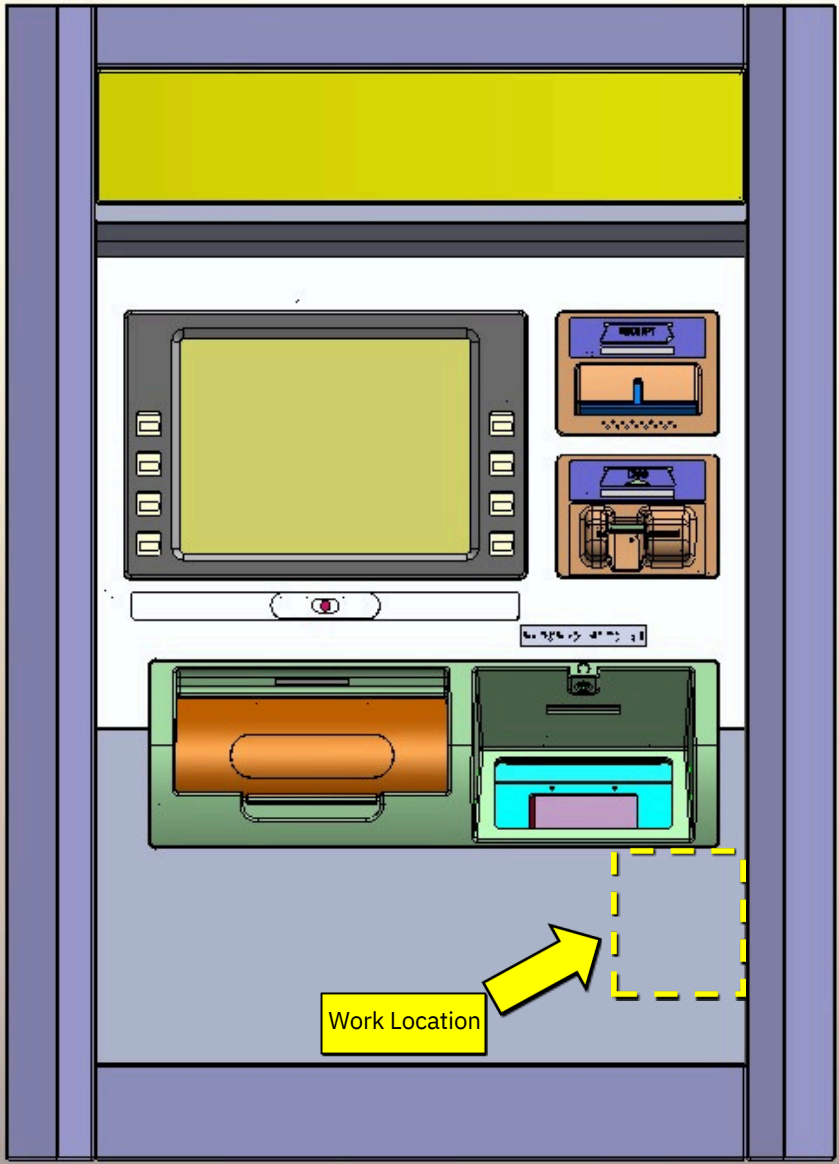


4. Work process

4-1. Attach the Jig

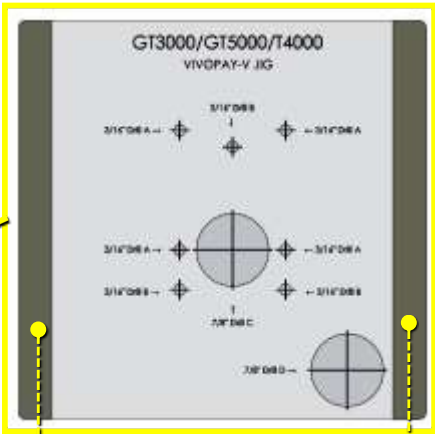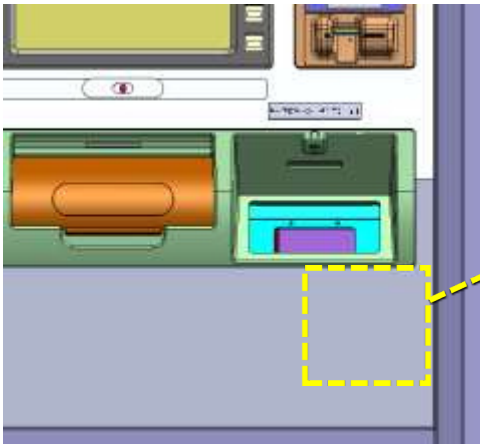


1 Remove the protective film from the double-sided tape

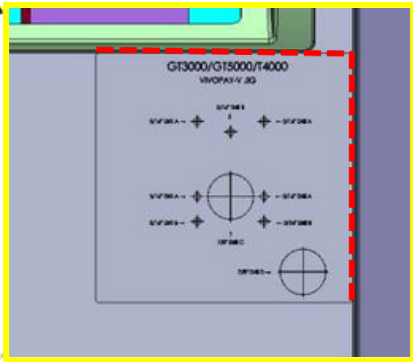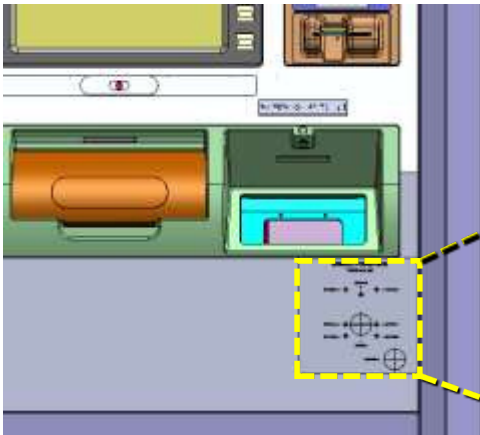

2 Align the outer lines of the VIVOPAY V JIG as shown in the figure and attach it

4-2. Drill holes in the Front bezel

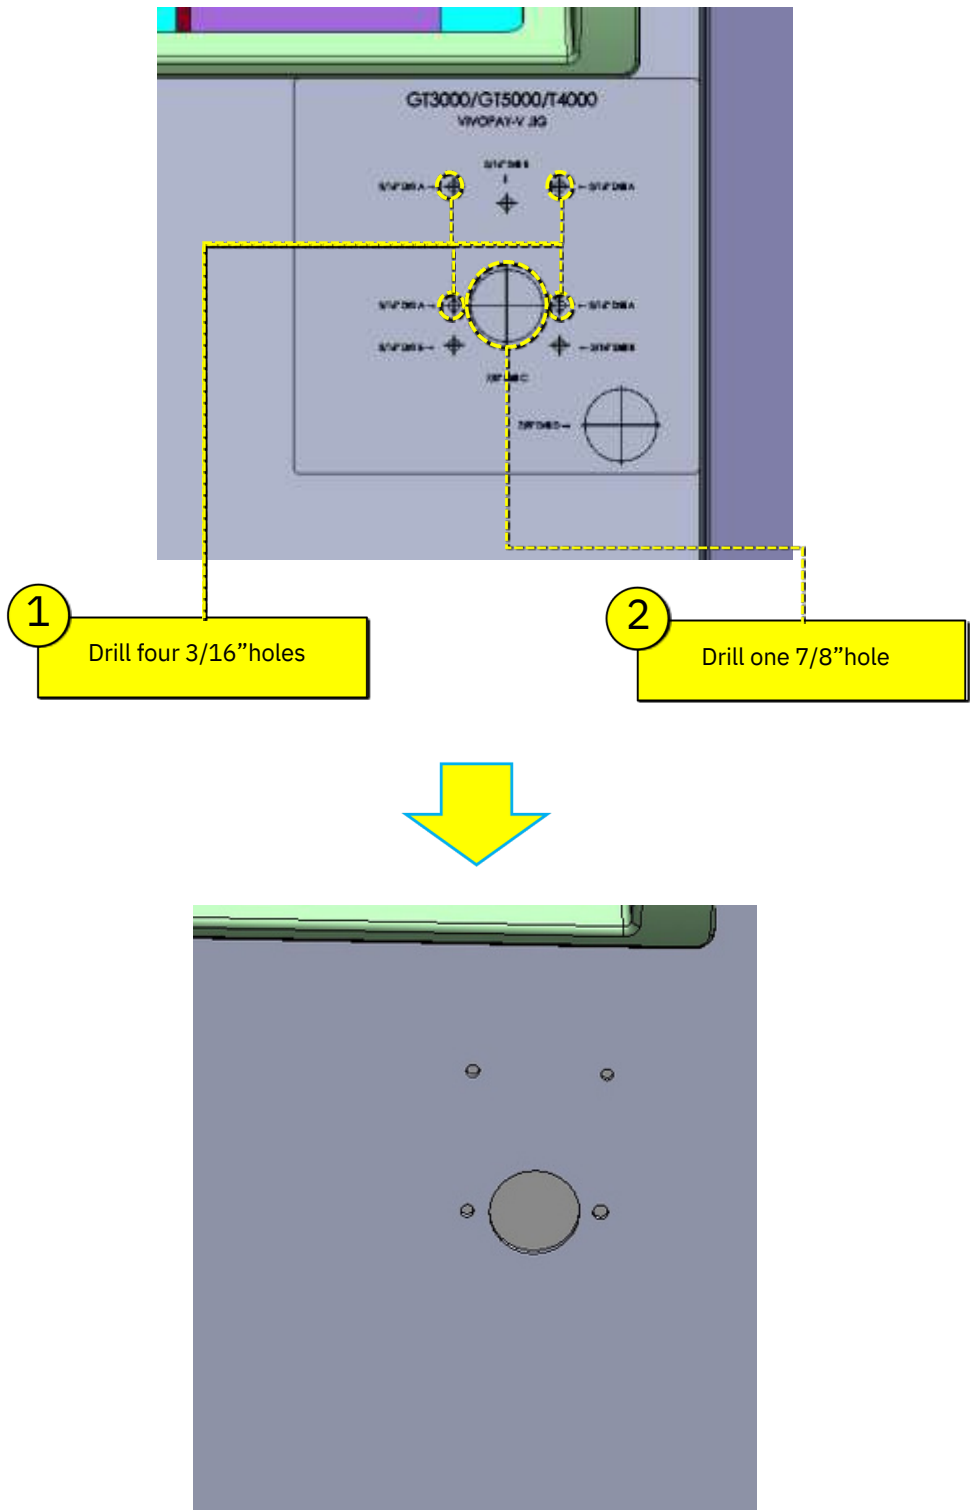


4-3. Install the VIVOPAY V module




1

Place the VIVOPAY V module as shown in the figure

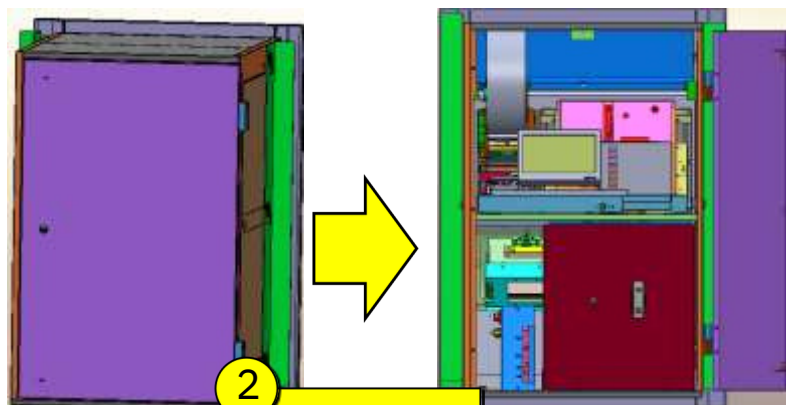

2


Open the door

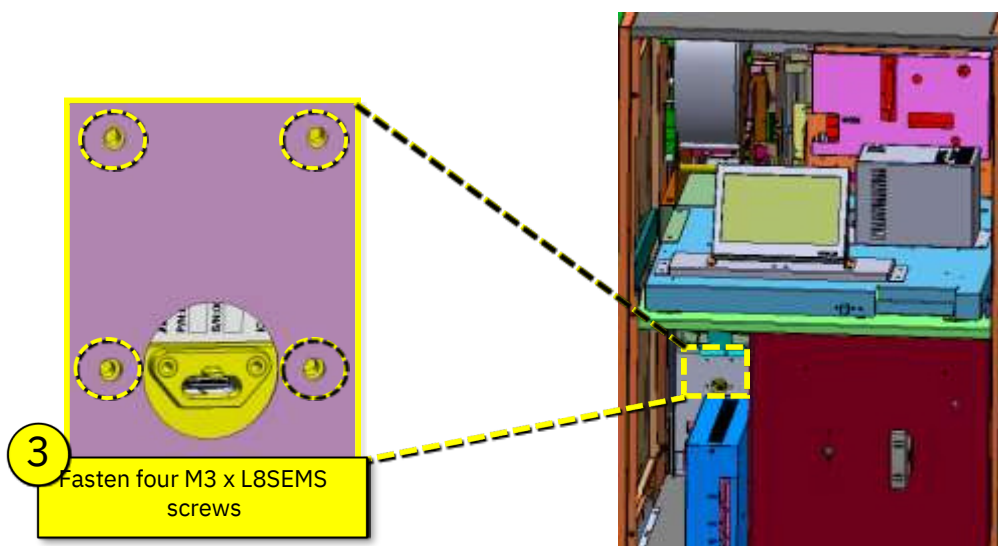

3

Fasten four M3 x L8SEMS screws

4-4. Cable connection diagram

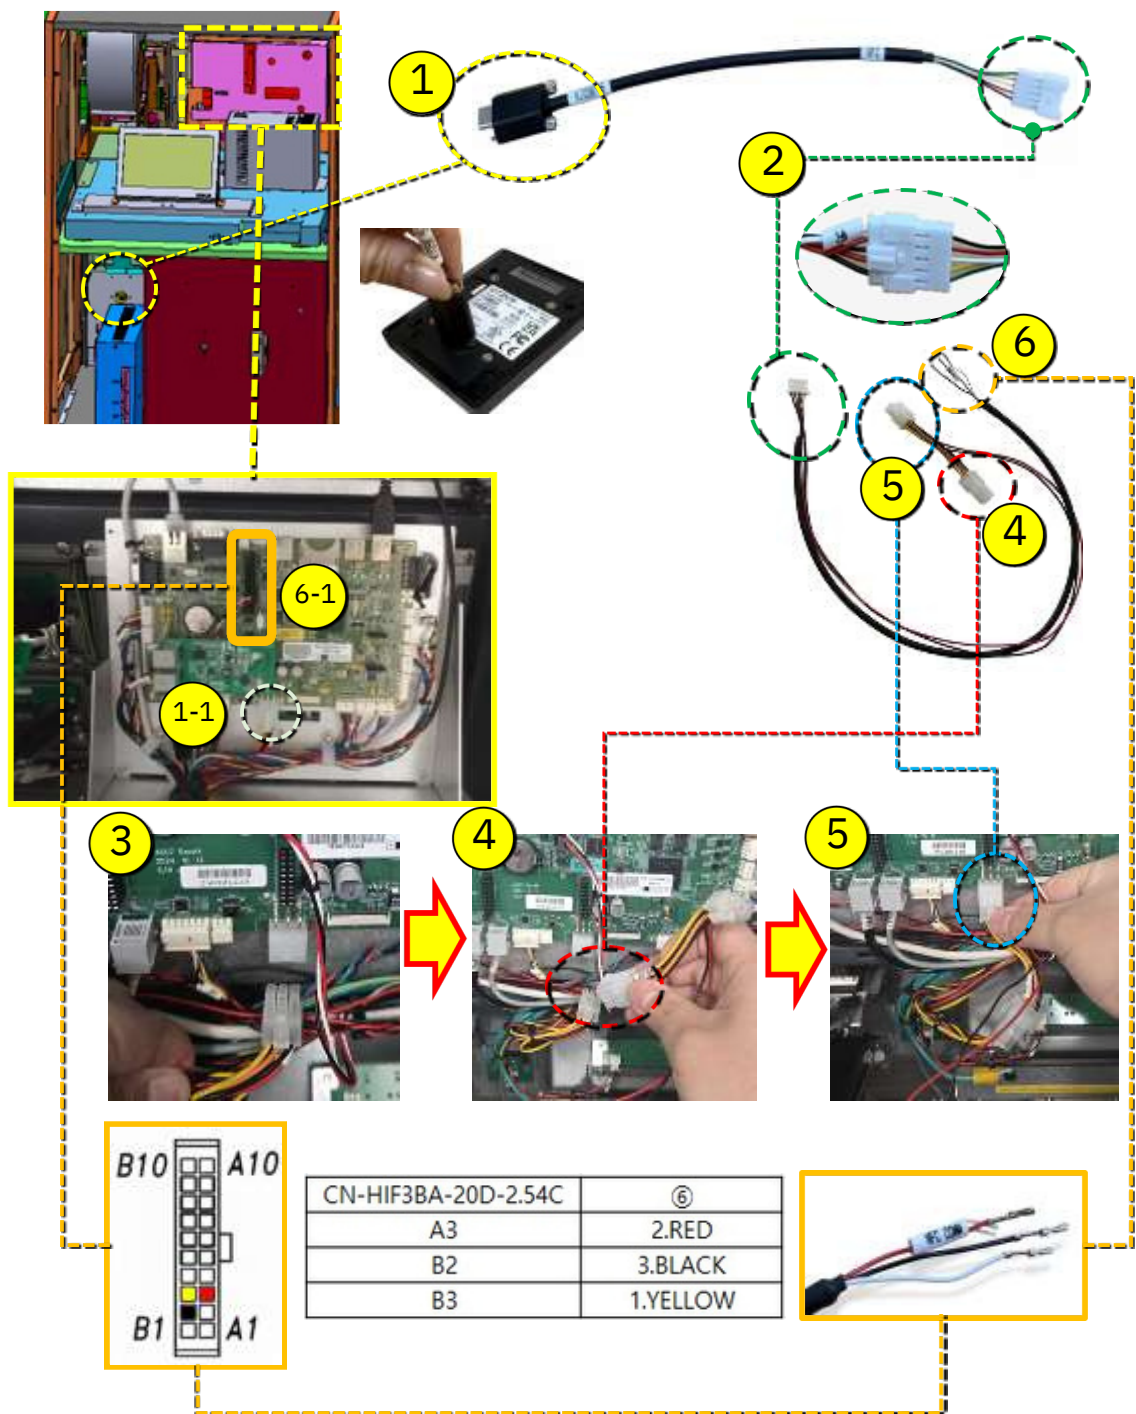

- 1 Connect Connector #1 (USB-C) of [CBL-R46ZM] to the VIVOPAY V module
- 2 Disconnect the board power cable at position 1-1
- 3 Connect connector #4 of the [CBL-R46ZR] to the original board power cable
- 4 Connect connector #5 of the [CBL-R46ZQ] to position 1-1
- 5 Insert the #6 cable wires of the [CBL-R46ZR] into position 6-1 referring to the table

5. Work completed

5-1. Work completed

